


Print

1. Download “Fuji Xerox Print Utility” from your app provider.




Fuji Xerox Print Utility


2. Open “Fuji Xerox Print Utility”. Tap [Print].

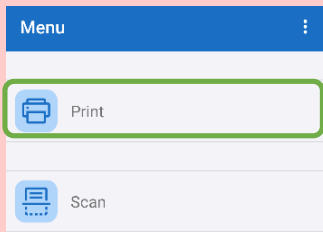


3. Tap [Print Albums] or [Print Web Pages]. Here, [Print Web Pages] is shown.

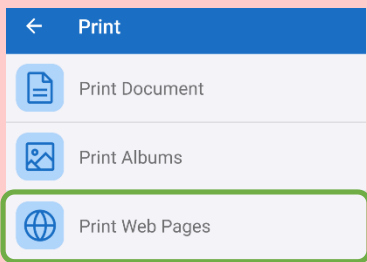


4. Tap [SETTINGS].

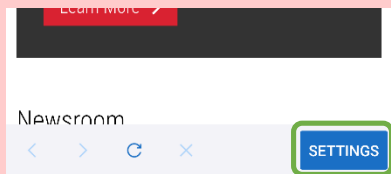


5. Tap [No Printer Registered]. Hold down the printer name to register.

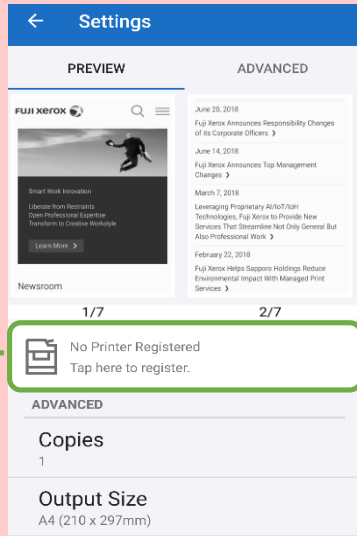

6. Tap [PRINT] to print.

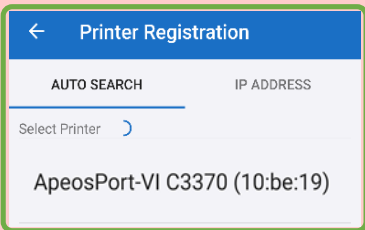

- ** Tap [ADVANCED] for more settings. For Auditor user, select [Accounting] and enter “User ID” (optional).

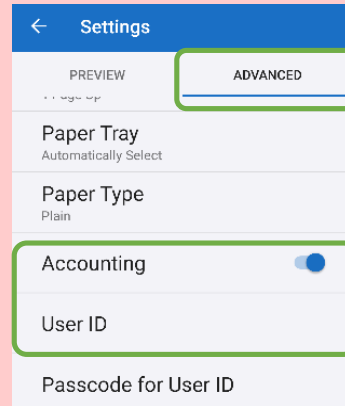


Scan


1. Click “Store to WSD” on the MFD.




2. Feed document.
3. Complete the App setting (refer to **Steps A.1-A.4**)
4. Click [Operate From Computer].
5. Refer to **Step A.5**.

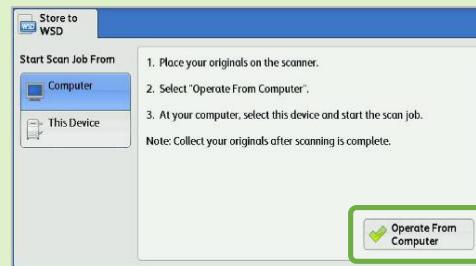

- ** On the App:
 - A.1. Open “Fuji Xerox Print Utility”.
 - A.2. Press [Scan].

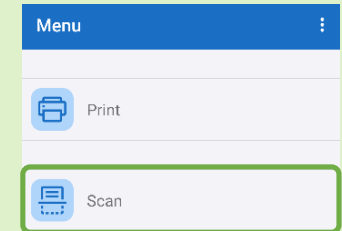

- A.3. Tap [No Printer Registered]. Hold down the printer name to register.
- A.4. Adjust any necessary settings.

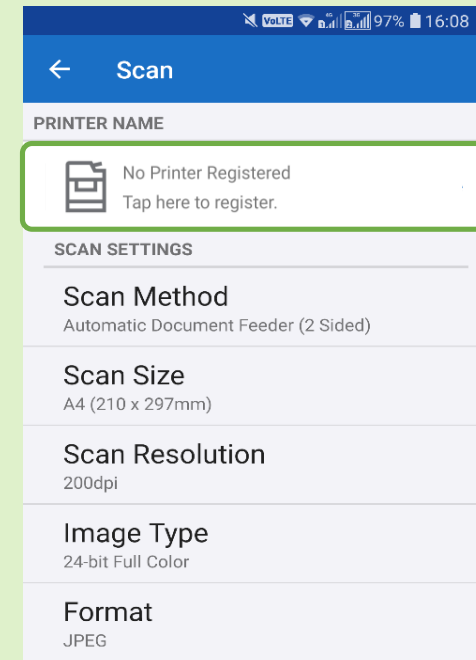

- A.5. Tap [Scan] to scan.

